

# MANUAL

English




MINIBAR SYSTEMS

## Unpacking

If your minibar has a lock, locate and remove the key from the back of the minibar. When unpacking the minibar check that nothing is missing or damaged. Damage in transit must be reported immediately to the carriers and Minibar Systems.

## Before Installation

Before plugging in the minibar check whether the voltage stated on the rating-plate (inside the cooling box) is the same as the mains voltage and use an earthed wall socket. Make sure the drip tray is level and properly snapped onto the bottom horizontal tube of the absorption cooling unit (see diagram right).

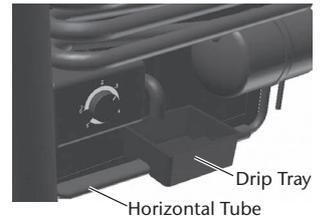

## Mains Cable

As the mains cable is supplied separately, please check (in case if the fridge is not working) whether the mains cable is properly plugged in and check the fuse. The use of an extension cord is not recommended. If the minibar is out of order or if the mains cable needs to be replaced, the connection has to be controlled by a qualified person or a technician from Minibar Systems.

**WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.**

**WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.**

## Ventilation Requirements

The minibar needs to be properly vented so that air can flow through the cooling unit. The minibar must not be installed closer than 120 mm from the wall. If the minibar is installed into hotel furniture, ventilation grilles or holes should be drilled into the wall or furniture to an area of at least 200 cm<sup>2</sup> to allow for sufficient air circulation. Never cover ventilation grills! See the *Minibar Case Good Specifications* manual available from Minibar Systems' website, [www.minibar.ch](http://www.minibar.ch).

## Installation

For optimum performance the minibar should not be too close to a source of heat and away from direct sunlight.

### The minibar must be on a level surface


Check that the minibar is in a level position and fixed down using 2 screws.

### Thermostat

Set thermostat to position 3.

### Mounting the Door Slide

The door slide (fixed either on the left hand or the right hand side) should be positioned in the vertical centre of the minibar (see diagram right).

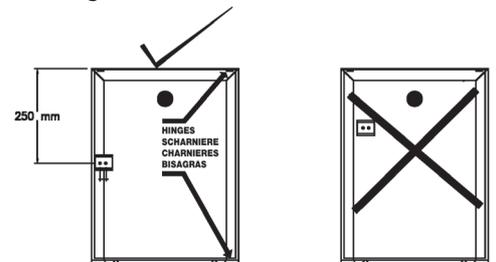

### How to Disable the Lock

The minibar is supplied with a lock that can be disabled. A lock cover is supplied on the front of the door covering the lock, and the lock shield is on the inside of the door covering the lock casing. To disable the lock, simply remove the lock shield from the lock casing, turn the lock shield around, push the lock catch down and attach the lock shield.



Lock shield cover fits around the lock casing. Lock catch is still in operation.

Lock shield cover has been turned around and is now holding the lock catch down, disabling the lock.



## Automatic Defrosting of the Evaporator

The minibar features an automatic defrost function. The device is adjusted to perform a defrost cycle every 23 hours of continuous work. During the defrost cycle the cooling unit stops working so that defrosting can take place. If the temperature increases over the upper limit or after one hour, the cooling unit starts working again automatically. The ice layer on the evaporator must never be removed by force nor should defrosting be accelerated by the use of a radiant heating element!

## Cleaning

Never use soap or sharp, grainy, abrasive cleaning agents, in particular those containing soda.

Opening of the door for long periods of time can cause a significant increase of the temperature in the compartments of the appliance.

If the Minibar is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mold from developing within the minibar.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance is intended for hotel use.

The disposed apparatus should be handled by professional staff as it may be harmful to the environment.

WARNING: DO NOT USE WITH AN EXTENSION CORD.

WARNING: CHILDREN AGED FROM 3 TO 8 YEARS ARE ALLOWED TO LOAD AND UNLOAD THE MINIBAR

Danger: Risk of child entrapment. Before you dispose of your old Minibar, take off the doors and leave the shelves in place so that children may not easily climb inside. Under no circumstances must the product be disposed of by incineration.